






SINGER®

BUTTON FAST™

SIMPLE and SAFE to use with built-in STORAGE

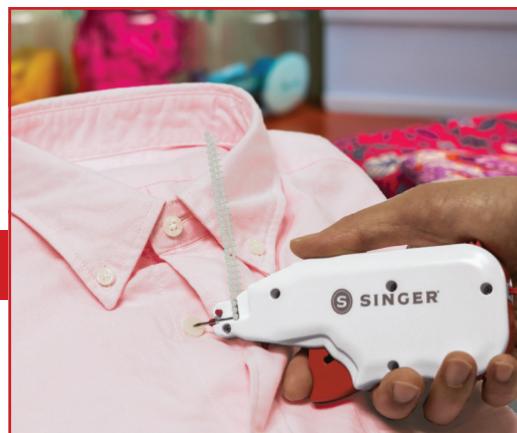

No-Sew Solution for replacing broken buttons and making temporary hems.

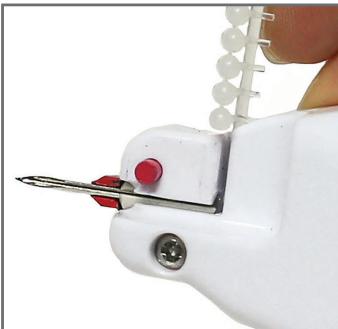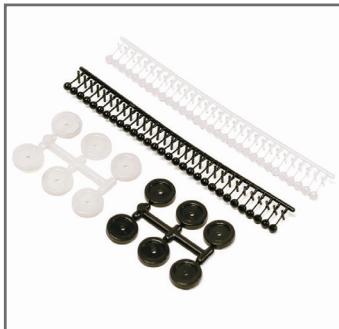



Fasteners & Buttons:

Remove fasteners and buttons from storage compartments respectively. Carefully use scissors and cut buttons off mold as needed.

Inserting Fasteners:

1. Insert fastener strip into the loading slot on top.
2. Press strip down gently until it touches the bottom.

NOTE: The fasteners are ready to use. Never cut from the strip. Fasteners work exclusively with SINGER Button Fast™. More fasteners strips and buttons available for purchase online.

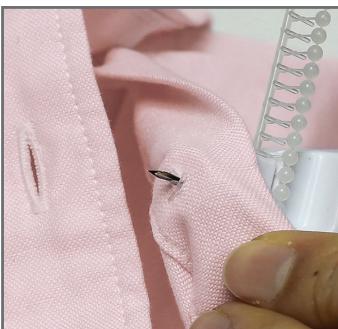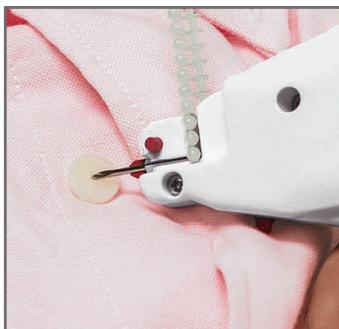

Attaching Buttons:

1. Place button in desired location on the clothing.
2. Insert needle all the way through the button and fabric of clothing.
3. Holding fabric and button tight against the Button Fast™, pull tack trigger firmly until the bar of the fastener comes out completely from the needle and through the back side of the clothing.

TIP: The Needle Shank of the Button Fast™ must be in touch with the button during the whole tacking process.



Bar of the Fastener

Unloading Fasteners:

To unload or replace the fasteners strip,

1. Push and hold the release button in direction of the needle.
2. Pull out the fastener strip gently from the top.

NOTE: Always unload the fastener strip and store inside the storage compartment when not in use.

IMPORTANT SAFETY INSTRUCTIONS: Keep out of reach of children. There are small parts and a sharp needle which can be dangerous. When not in use, cover and protect the needle with tethered needle cover. Never remove the needle. **NOTE:** Machine will not work with a missing or bent needle.

Please reference the SINGER Button Fast™ Instruction Booklet included with the unit for more information.